



LED ROUND FLOOD LIGHT

**PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLATION
LEAVE A COPY FOR THE USER / MAINTENANCE ENGINEER FOR FUTURE REFERENCE**

IMPORTANT INSTALLATION INFORMATION

 WARNING RISK OF ELECTRIC SHOCK • Disconnect power before performing installation or maintenance • Verify that supply voltage is correct by comparing it with the luminaire label information. • Make all electrical grounded connections in accordance with the latest edition of the National Electric Code (NEC) and applicable local code requirements. • If the supply wire is damaged. It must be replaced by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard. • All wiring connections should be capped with UL approved wire connections.	 WARNING CAUTION • Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. • If electrical appliances are disposed of in landfill or dumps, hazardous substances can be damaging to health and well-being. • Contact your local government for information regarding the collection system available. • This device is not intended for use with emergency exit fixtures or emergency exit lights. • To reduce the risk of electrical shock, do not remove cover and caps, fitting must be grounded. • No user-serviceable parts inside. • Do not use when enclosure is broken. • To prevent wiring damage or abrasion does not expose wiring to edges of sheet metal or other sharp objects.
 WARNING RISK OF BURNS • Do not exceed maximum wattage on luminaire label. • Follow all manufacturer's warnings and recommendations for the driver type, mounting position, methods, replacements and recycling.	 WARNING RISK OF FIRE • Keep any combustible and other materials that can burn away from the luminaires. • Incorrect installation may result in electrical shock or a risk of a fire

For Models: AR-FLD100

Accessories: M6 Wrench and M10 Wrench for mount and back plate

INSTALLATION INSTRUCTIONS


- Switch off main power before installing or performing maintenance on the fixture
- This product is solely suited for installation for wall or in-ground mounting
- Install mounting bracket to the fixture using 2xM10 30mm screws and 2xM10 Nuts and 10mm spring washers which are provided.
- Remove back cover to access wires for installing power wires by loosening the 4 x M6 screws with the tools provided. (See Figure 1)
- Connect wires to terminal block. "Black" line wire should be connected to the line side of the fixture. "White" neutral wire should be connected to common side of the fixture. Earth ground "Green" should be connected to "Green" wire. (See figure 2)
- Tighten cable gland making sure that IP rated seal is seated properly and fastened to a (Torque of 4 ft-lb)
- Re-install back cover and make sure all screws are secured properly. (See Figure 3)
- Test power and make sure that all LED's light up.
- Adjust right angle of mounting and once set, tighten screw to (Torque of 18 ft-lb)

Aurora Lighting Inc., 19329 US Highway 19 North, Clearwater, Florida, 33764, USA


Website: www.auroralighting.com Email: info@auroralighting.com

Document Version - IS_Flood 100_V2


(Figure 1)

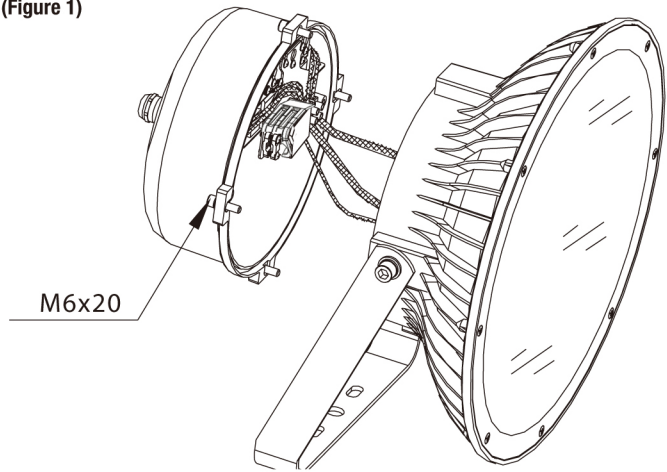

(Figure 2)

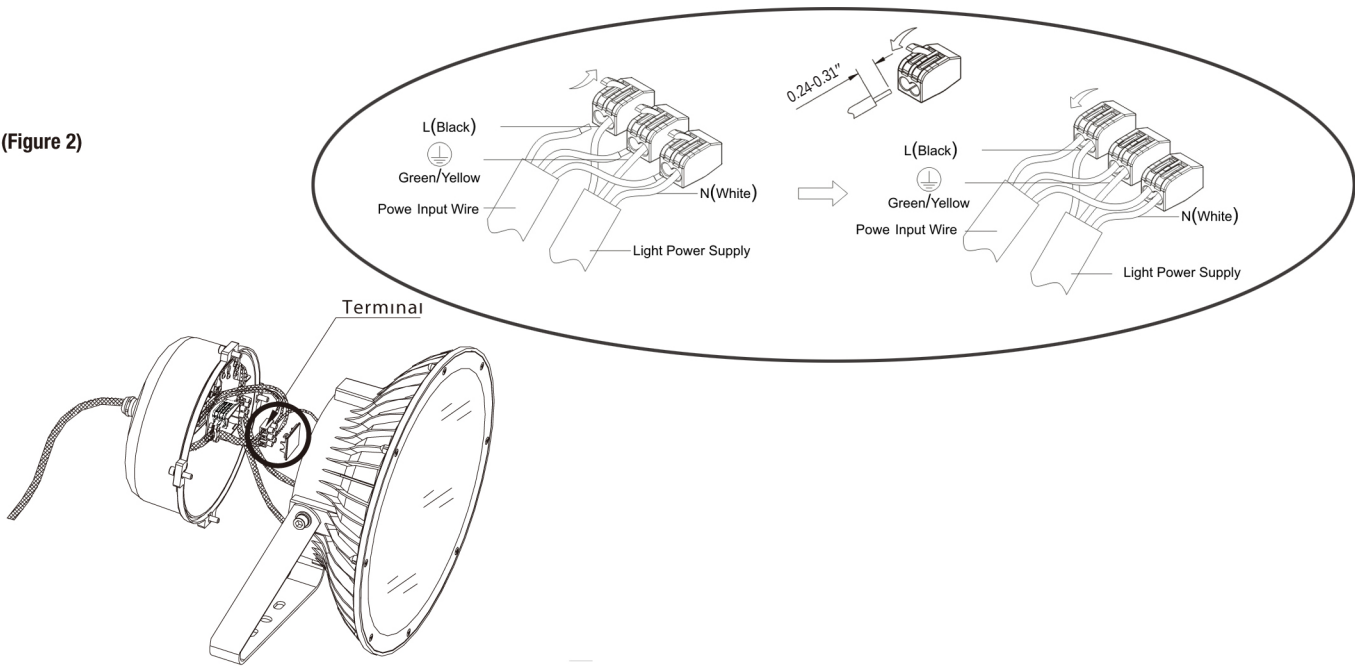

(Figure 3)

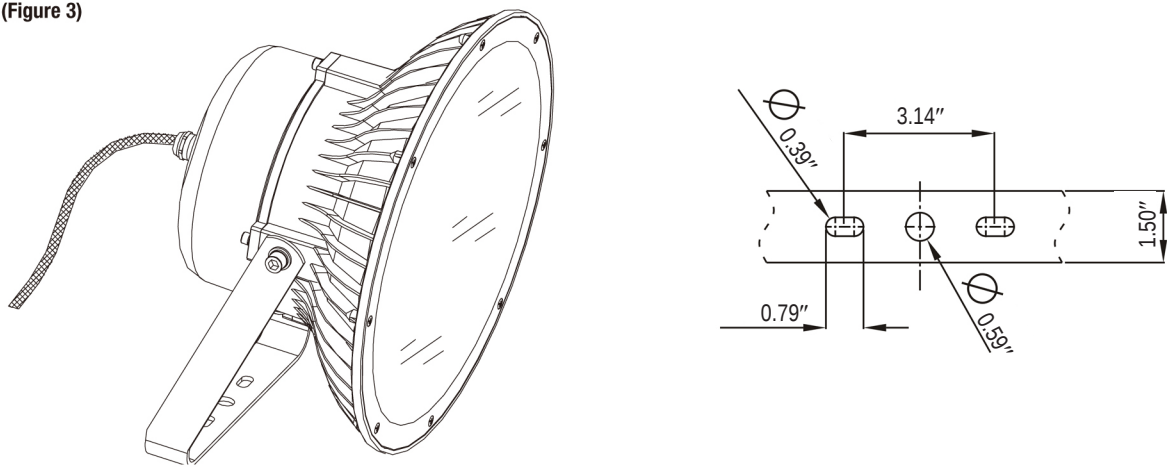

WARRANTY:

This product has a warranty of period of 2 years from the date of purchase. The warranty is invalid in the case of improper use, installation, tampering, and removal of the Q.C. date label, installation in an improper working environment or installation not according to the current edition of the National Electric Code. Should this product fail during the warranty period it will be replaced free of charge, subject to correct installation and return of the faulty unit. Aurora does not accept responsibility for any installation costs associated with the replacement of this product. This warranty is in addition to the statutory rights in your country of purchase. Aurora reserves the right to alter specifications without prior notice.